


THE SHARPER IMAGE®

Magnetic Therapy Roll Massager

HF733 Instructions

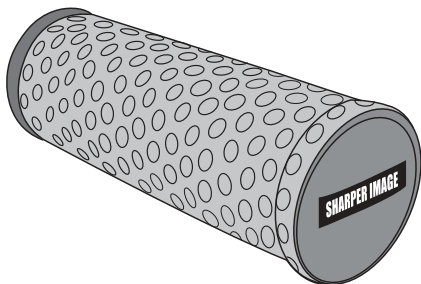

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

A handwritten signature in black ink that reads "Richard". The script is fluid and cursive, with a small dot above the 'i'.

Richard Thalheimer

Founder, Chairman and Chief Executive Officer

*Call 1-800-344-4444 for 24-7 ordering and customer service,
or go to **www.sharperimage.com**, our complete online store.*

Warning

Magnetic therapy is a NON-MEDICAL method for the treatment of pain. If you suffer from an injury or an ailment, consult a physician for medical advice. This product should never be used as a replacement for professional medical treatment.

Safe, drug-free therapy for pain relief

For centuries, magnets have been used to ease pain, promote the body's natural healing process and improve blood flow. Our complete line of Magnetic Therapy products is designed to the highest standards for years of dependable service.

Important Safeguards

- Read all instructions carefully before using.
- If at any time soreness, rash or an increase in pain occurs, discontinue use and consult your physician.
- Never use this appliance on or near the eyes, temples or other highly sensitive areas.
- Only use this product for its intended purposes as described in the manual.

Important Safeguards

- Do not use this product over an open wound.
- Do not use this product while using transdermal drug delivery skin patches.
- Individuals with pacemakers should never use this product.
- A massage session longer than 15 minutes is not recommended.
- Not recommended for use during pregnancy.
- Children should not use or play with this product.
- Do not machine-wash magnets.
- Magnets should be kept at least six inches away from electronic devices, computers, TVs, video equipment and tapes.
- Keep magnets away from credit cards and other cards with magnetic strips (direct contact may demagnetize your cards).
- Always store in a box in a dry, cool place.
- Avoid contact with sharp objects that may puncture surface of the product.
- Avoid contact with water or any other liquids.

Battery Precautions

- Use only the size and type of batteries specified.
- When installing batteries, observe correct +/- polarities. Incorrect installation of batteries may cause damage to the unit.
- Do not mix different types of batteries together (e.g., alkaline with carbon-zinc or old batteries with new ones).
- If the unit is not going to be used for a long period of time, remove batteries to prevent damage or injury due to possible battery leakage.

Battery Installation

1. Roll back fabric lip located on the end of massager labeled "Sharper Image™." Unzip to expose battery compartment. Remove battery cover.
2. Insert four AA batteries (purchase separately) observing +/- polarities diagram located inside the battery compartment.
3. Replace battery cover. Zip end closed.

Instructions

1. To turn on, slide the **ON/OFF** switch located on the end of massager (opposite battery compartment) to the desired **HI** or **LO** setting.
2. Gently rest neck, back or legs on massager.

Note: A massage session longer than 15 minutes is not recommended.

Cleaning

Wipe clean with a soft cloth. Avoid contact with water or any other liquids.

WARRANTY

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.
V1 07/03